



PCI modem 56K V.90/V.92

Installation Guide

Copyright

Copyright . 2001 by this company. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

Disclaimer

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Table of Contents

- 1 Package Contents
- 2 Card Layout
- 3 Installing the Modem
- 4 Setting Up your Modem for Windows 95/98
- 5 Setting Up your Modem for Windows ME
- 6 Setting Up your Modem for Windows 2000
- 7 Setting Up your Modem for Windows NT
- 8 Setting Up your Modem for Windows XP
- 9 Need More Information

Quick Start

Congratulations on your purchase of this Data/Fax modem. This modem features the latest innovations in high-speed modem design, making electronic communication faster and easier. This Quick Start guide will show you how to install and properly use the modem in order to take full advantage of its features.

1 Package Contents

Carefully unpack and remove the contents. Contact your dealer immediately if any of the following is missing or damaged:

Modem card


Telephone cable

Quick start guide

CD-Title with Application Software and Installation Guide

2 Card Layout

AMI-2019

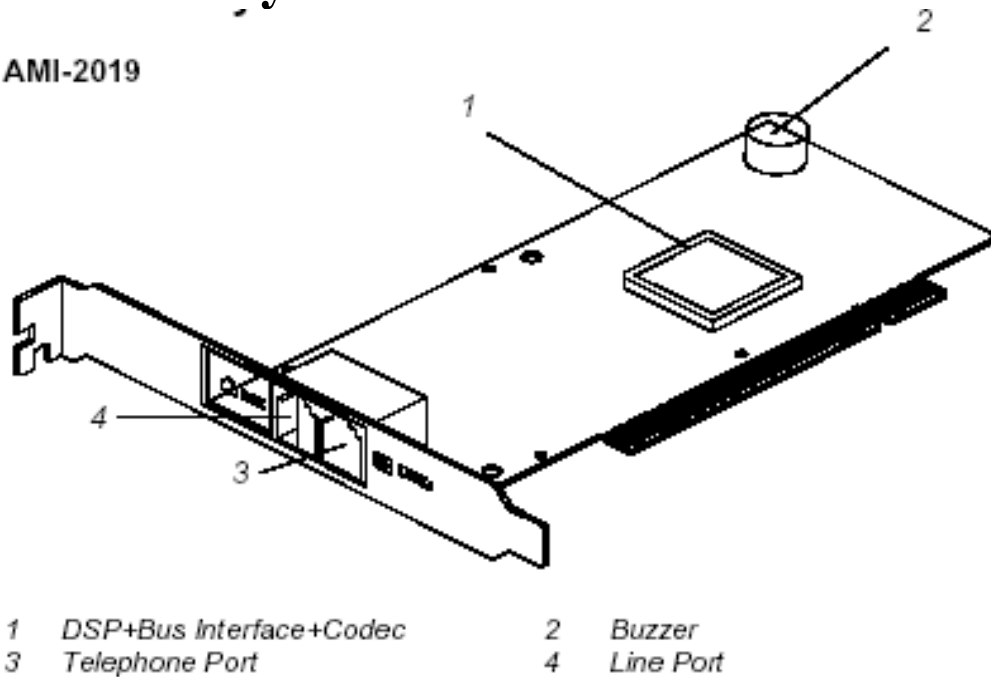

3 Installing the Modem

This internal modem is easy to install. please follow the instructions below.

To install the modem:

1. Turn off the system and unplug your system from the power supply.
2. Remove the system cover. Refer to your housing manual for instructions.
3. Locate an empty PCI slot on the system board.


4. Check your modem card model.
5. Plug the telephone cable into the *LINE* jack located at the front of the bracket. Plug the other end of the telephone cable into a telephone line jack.
6. To connect a telephone to the modem:
 - a. Plug the telephone to the modem *PHONE* jack.
 - b. Lift the handset and listen for a dial tone to check for a working connection.
7. Turn your computer on. If your O.S is not Windows 9X/ME/2K/NT/XP, please read the guide.doc in Application Software CD. There is more detail installation description inside. If your O.S is Windows 9X/ME/2K/NT/XP, please read section 4/5/6/7/8/9.

4 Setting Up Your Modem for Windows 95/98


1. Turn on your computer. As the Windows 98 operating system boots up, it displays a Add New Hardware Wizard dialog box shown on your screen for a few seconds with the identifier name (PCI Communication Device) of your modem.
2. Click **Avanti**, then a new dialog box will show on the screen.



3. In the new dialog box, you have two choices to install a driver. The default choice is search for the best driver for your device and click **Avanti**.

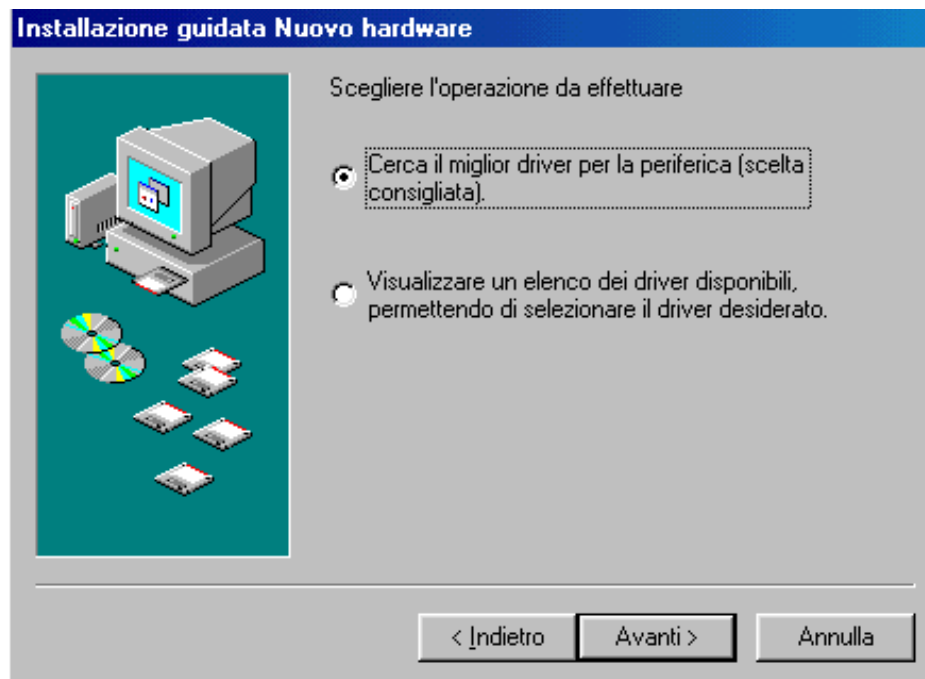

4. New Add New Hardware Wizard dialog box will display on the screen. Insert the Driver CD into the CD-ROM driver.

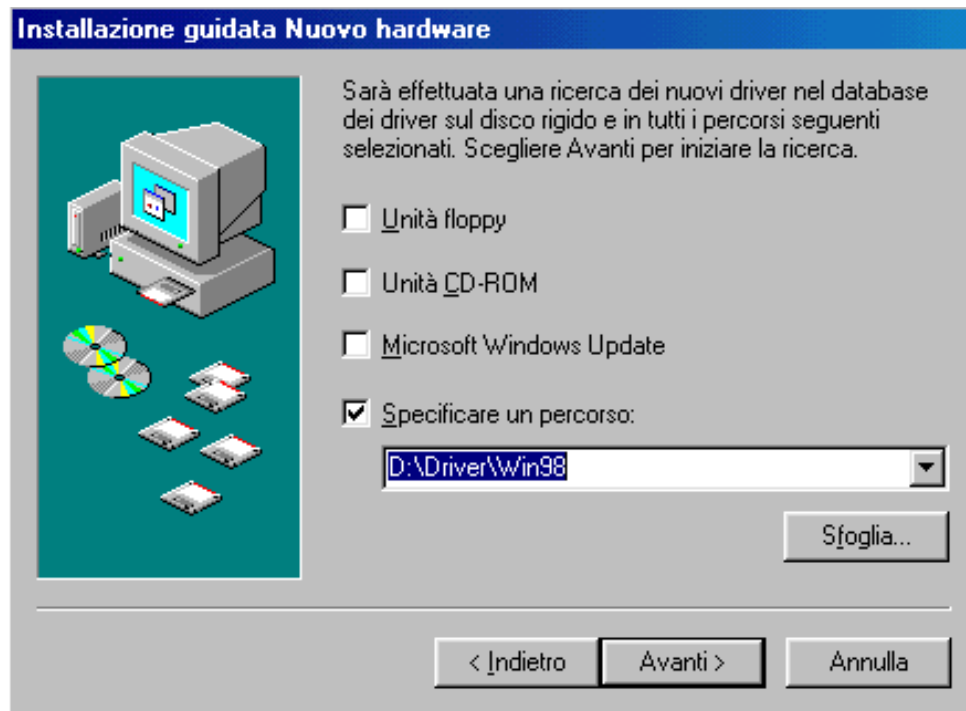

5. Choose Specify a location to browse for driver folder, and click Browse, choose the CD-ROM location (Ex: D:\Driver\win9X).



6. Windows 98 will copy the files onto your hard disk. Click **Fine**.



5 Setting Up Your Modem for Windows ME


1. Turn on your computer. As the Windows ME operating system boots up, it displays Add New Hardware Wizard dialog box shown on your screen for a few seconds with the identifier name (PCI Communication Device) of your modem.
2. Choose Specify the location of the driver. Click **Avanti**.



3. Add New Hardware Wizard dialog box will display on screen. Choose Browse for driver folder (Ex: D:\Driver\WinMe). Click **Avanti**.



4. Windows ME will copy the files onto your hard disk, click **Fine**.

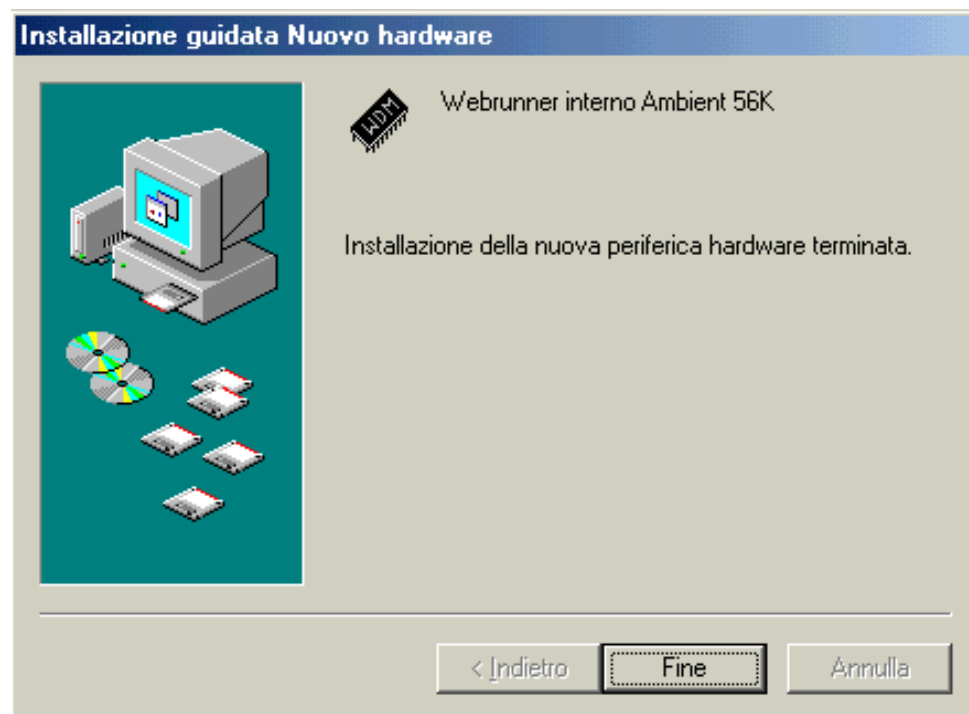

5. It displays Add New Hardware Wizard dialog box shown on your screen for a few seconds with the identifier name (Modem Device) of your modem.
6. Choose Specify the location of the driver. Click **Avanti**.



7. Add New Hardware Wizard dialog box will display on screen. Choose Browse for driver folder (Ex: D:\Driver\WinMe). Click **Avanti**.




8. Windows ME will copy the files onto your hard disk, click **Fine**.




6 Setting Up Your Modem for Windows 2000


1. Turn on your computer. As the Windows 2000 operating system boots up, it displays a Found New Hardware Wizard dialog box shown on your screen.
2. Click **Avanti**, then a new dialog box will show on the screen.

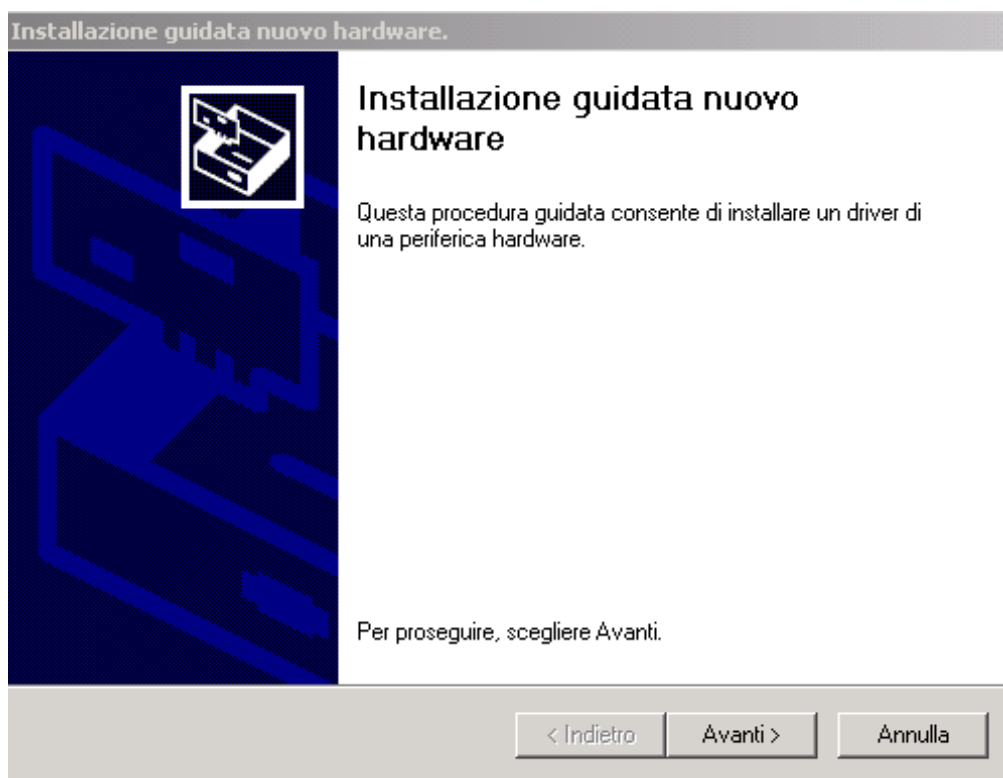


3. In the new dialog box, you have two choices to install a driver. The default choice is search for the best driver for your device and click **Avanti**.

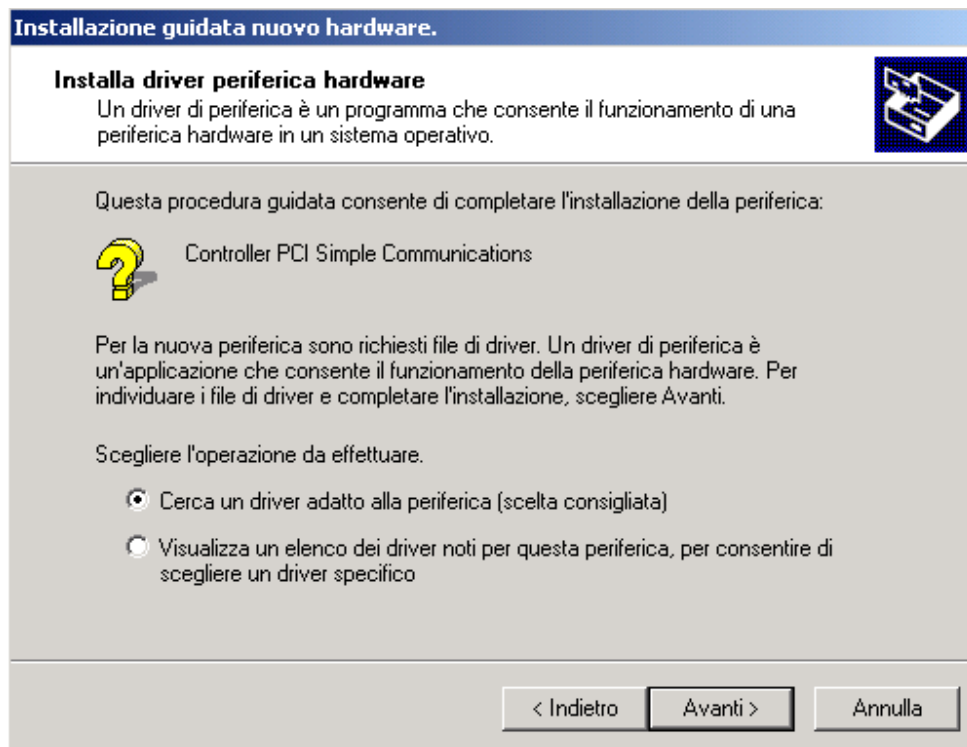


4. Choose Specify a location, then click **Avanti**.

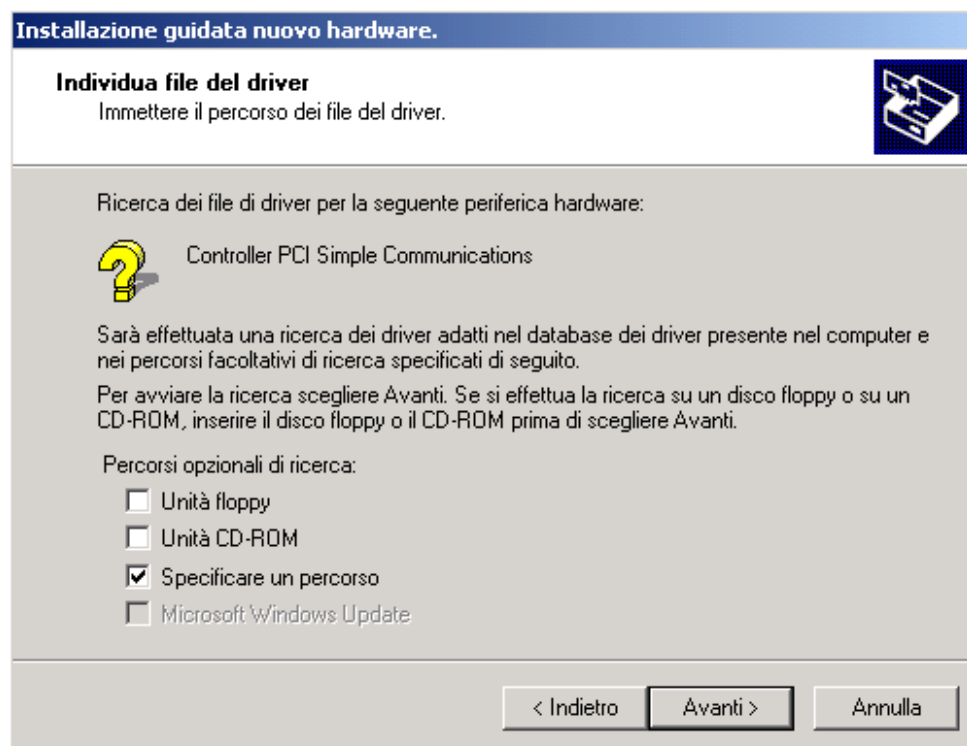

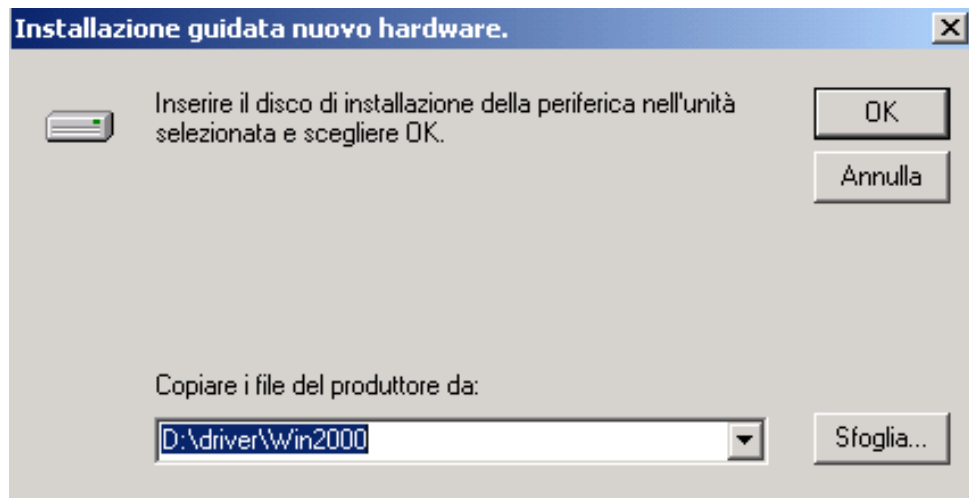

5. Insert the driver CD into the CD-ROM device. Click Browser and choose the CD-ROM Location (Ex: D:\Driver\Win2000). Windows 2000 will copy the files onto your hard disk. Click **Continua** and after **Fine**.



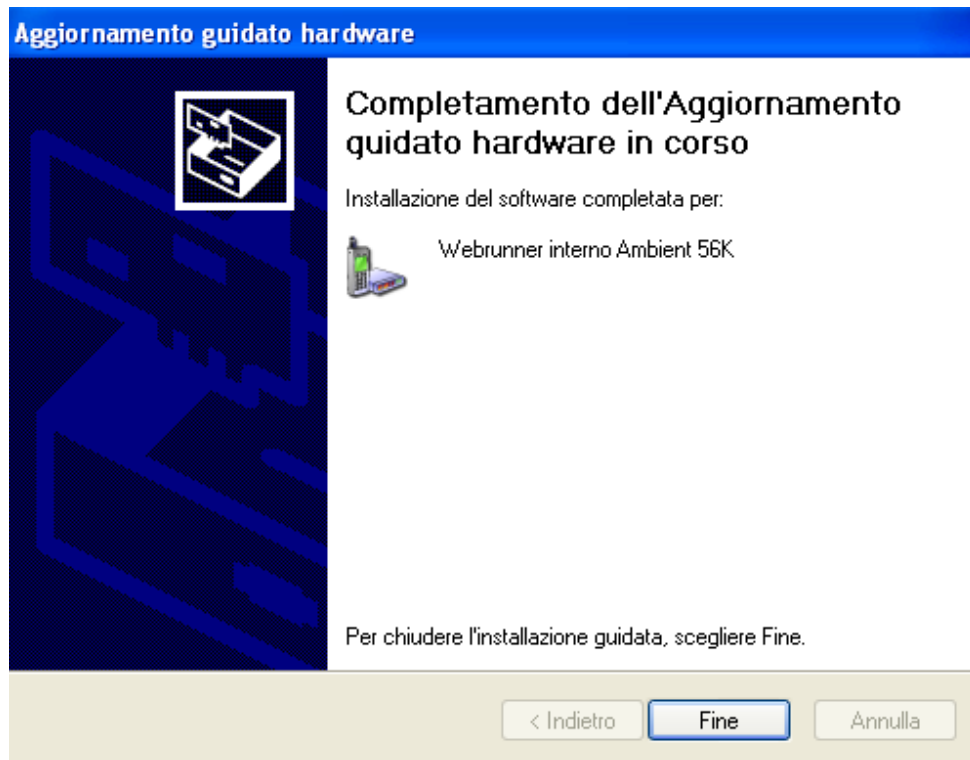


7 Setting Up Your Modem for Windows NT


1. Turn on your computer. As the Windows NT operating system boots up, and choose Driver CD (Ex: D:\Driver\NT4\installer.exe). Double click installer icon.
2. It displays Modem Board Installation Wizard dialog box shown on your screen, and click **SI**.
3. Window NT4.0 will copy the files onto your hard disk. Click **OK**.

8 Setting Up Your Modem for Windows XP

1. Turn on your computer. As the Windows XP operating system boots up, it displays a Found New Hardware Wizard dialog box shown on your screen.
2. In the new dialog box, you have two choices to install a driver. Choose The Install from a list or specific location (Advanced) Then click **Avanti..**

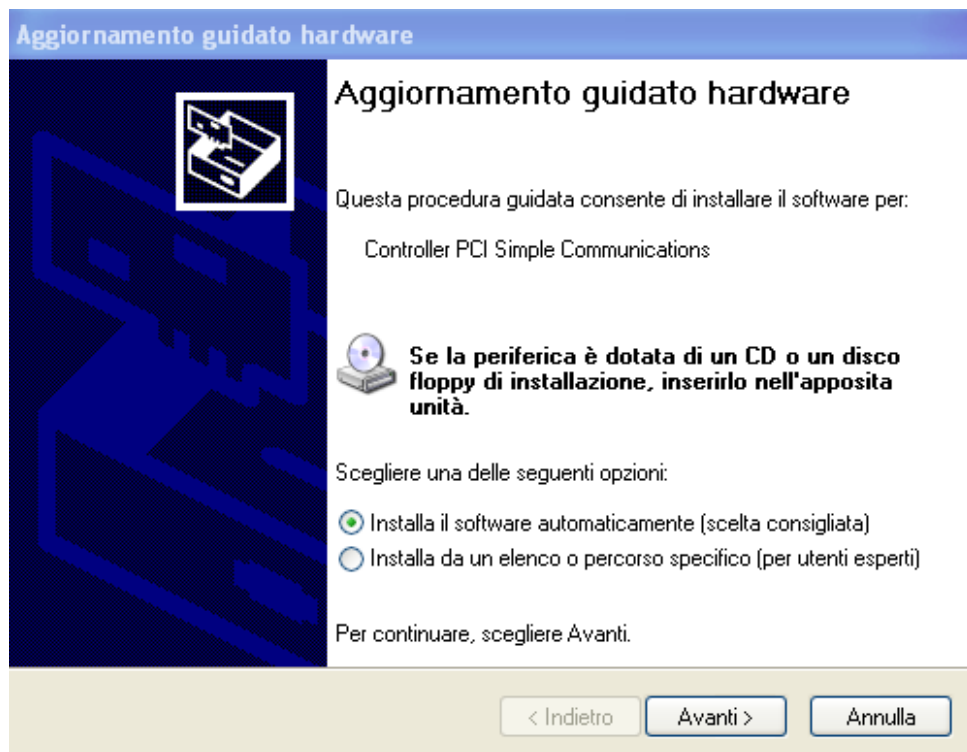


3. Choose Include this location in the search .
4. Insert the driver CD into the CD-ROM device. Click Browser and choose the CD-ROM Location (Ex: D:\Driver\WinXP).

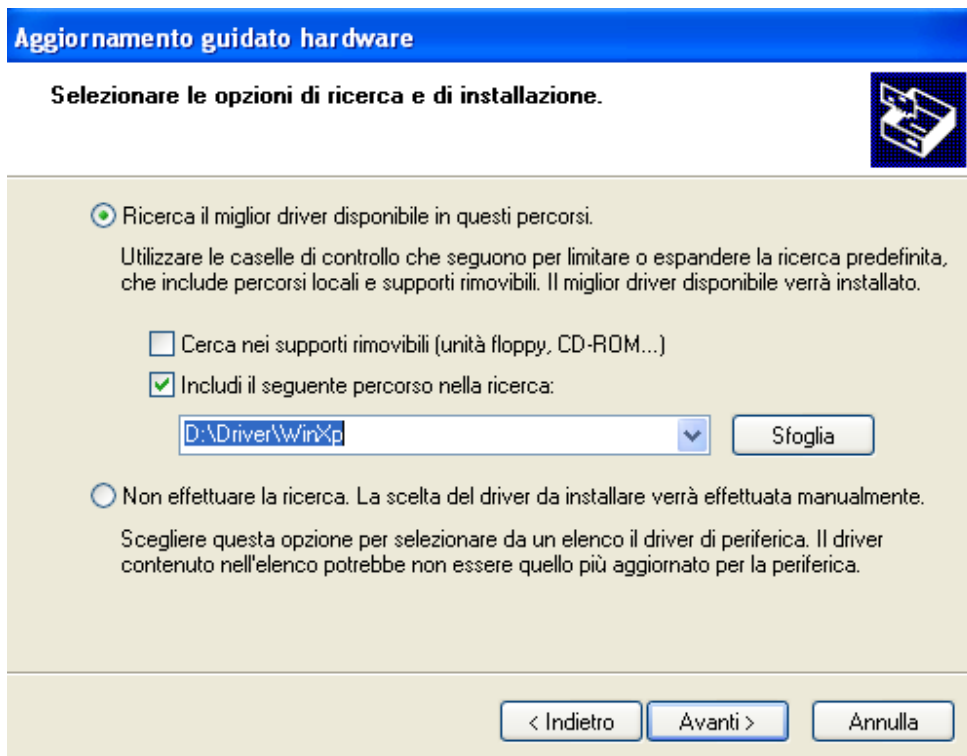

5. Windows XP will copy the files onto your hard disk. Click **Continua** and after **Fine**.



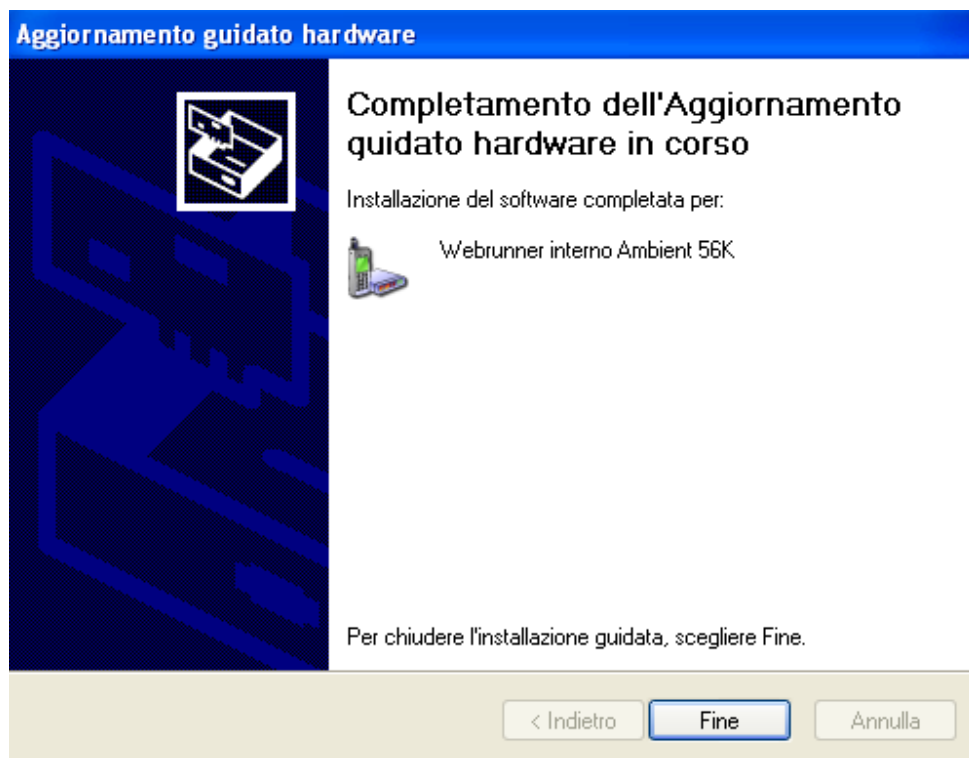

9 Need More Information

If you need more information about the modem, refer to the detailed user manual on the CD.

If you have any other questions you can contact the Atlantis Land company directly (02/93907634 from the monday to the friday from the 9:00 at 13:00 o'clock and from the 14:00 at 18:00 o'clock or through mail: info@atlantisland.it or tecnici@atlantisland.it)